

## Jamming Mode

1. Press the **12 Jamming button** to start to play Jamming mode.
2. Press any one of the play guitar strings to get guitar sounds and play cool jamming sounds.
3. Press **10 Riff Buttons** or **4 Whammy Bar** to get fun sound and guitar effects.

## Strumming Mode

1. Press the **14 Strumming button** for Strumming mode. A backing track will play.
2. Press any **10 Riff Buttons** to play one of the guitar riffs.
3. Press any one of the play guitar strings to re-start the song.

## Guitar Mode

1. Press the **13 Guitar button** to play guitar mode.
2. You can play guitar strings and **10 Riff Buttons** like a real guitar.

## Turning the Guitar Off

1. The Barbie™ Guitar will auto power off after 30 seconds if no button/string is pressed.
2. Press the **9 Demo/Off button** to turn Guitar off immediately.

## Troubleshooting

If improper operation occurs, press the **Reset Button** located on the back of the unit.

If the toy still does not play, check the batteries. It is most likely weak batteries, and you'll need to replace them with new batteries.

If the unit still does not work after changing the batteries, make sure you have installed them properly, with the + and - polarities matched up with the diagram printed inside the battery compartment.

If there is a distorted or fuzzy sound, the batteries may be weak. Replace with new batteries.

If problems persist, **do not attempt to repair the toy yourself.** See the warranty for factory service information.

## Questions or Comments

- For questions or comments regarding this or other KIDdesigns products, please call our toll-free number:

**1-888-TOP-TOYS.**

Also visit our website: [www.toptoysonline.com](http://www.toptoysonline.com)

### PINK CARTRIDGE:

"Beautiful Soul" Words and Music by Andrew Dodd and Adam Watts © 2004 Seven Peaks Music o/b/o itself, Dodd Music and Dying Ego Music (ASCAP) - 100% All Rights Reserved.

"Girls Just Want To Have Fun" by Robert Hazard © 1979 Sony/ATV Tunes LLC.

"She Will (Be Loved)" Courtesy of R. Kelly Publishing / Zomba Songs Inc. (BMI), Under License from BMG Film & TV Music.

### BLUE CARTRIDGE:

"What Dreams Are Made Of" Words by Dean Pitchford and Music by Matthew Wilder © 2003 Walt Disney Music Company (ASCAP) / Wonderland Music Company, Inc. (BMI) - 100% All Rights Reserved.

"Too Little Too Late" by Billy Steinberg, Josh Alexander and Ruth-Anne Cunningham © 2006 Jerk Awake (ASCAP), Jetanon Music (admin. by Jerk Awake) and Shapiro, Bernstein & Co., Inc. (ASCAP) Used by permission. All rights reserved.

"Do You Believe in Magic" (written by John Sebastian) Used by permission of Alley Music Corporation and Trio Music Company.

## Limited 90-Day Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$9.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$9.00.
4. Send the unit prepaid to the Factory Service Center listed below.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to:

**Consumer Repair Department  
KIDdesigns, Inc.  
1330 Goodyear Dr.  
El Paso, TX 79936-6420**

BARBIE and associated trademarks and trade dress are owned by, and used under license from Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

Manufactured and Distributed by KIDdesigns, Inc.  
Rahway, NJ 07065-5024

### SILVER CARTRIDGE:

"What A Girl Wants" By Shelly Peiken and Guy Roche Published by EMI BLACKWOOD MUSIC INC. Courtesy of Manutti L.A. c/o BMG Songs, Inc. (ASCAP). Under license from BMG Film & TV Music and EMI Blackwood Music Inc.

"Go Figure" Words and Music by Andrew Dodd and Adam Watts © 2005 Walt Disney Music Company (ASCAP) - 100% All Rights Reserved.

"I'm A Believer" Words and Music by Neil Diamond © 1966, Renewed 1994 FORAY MUSIC and STONEBRIDGE MUSIC. All rights administered jointly by Foray Music and Stonebridge Music. All Rights Reserved. International Copyright Secured. Used by Permission.

**WARNING:** It is a violation of Federal Copyright Law to synchronize any music from these cartridges with video tape or film, to copy any music from these cartridges onto phonorecords, or to print material from these cartridges in the form of standard music notation and/or words without the express written permission of the Copyright owners.

 
Printed in China

BE644M3-051807-A

# Barbie™

Model BE-644

## "Jam with Me" Electric Guitar

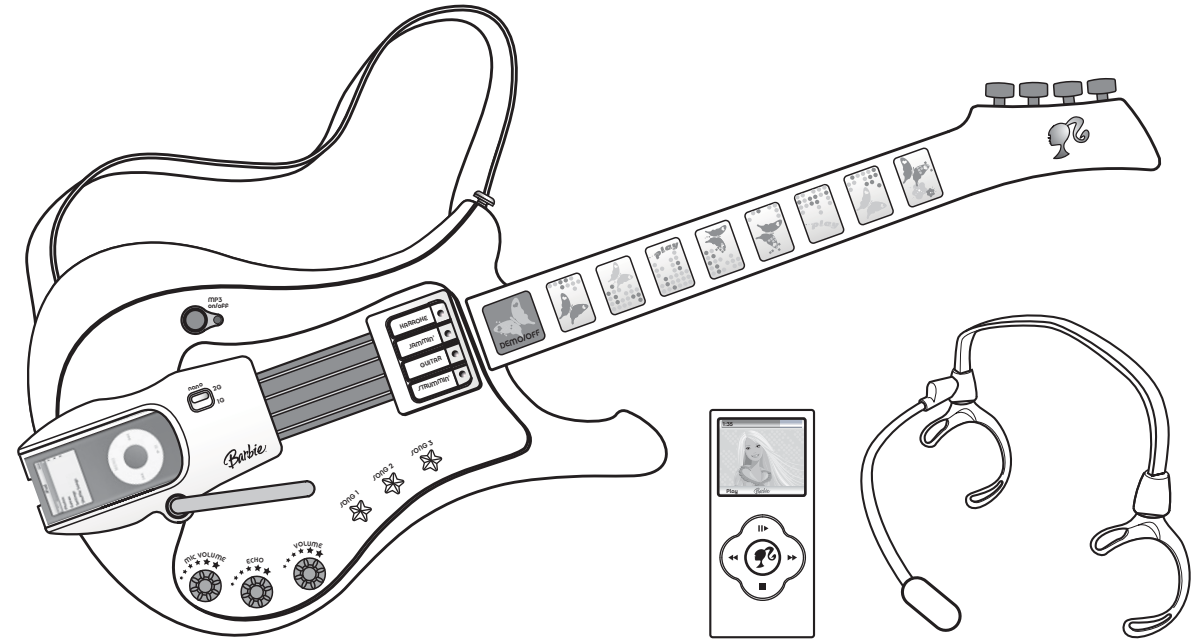

**NOTE: iPod nano not included**

## Important Message to Consumers

Thank you for purchasing one of Barbie™'s many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you understand the safe and proper way to use this product, and to help give it the long-lasting life that Barbie™ products are designed for.

Keep these instructions for future reference as they contain important information.

## Getting Started

### Battery Installation

**ATTENTION:** Batteries should only be installed by an adult.

 
1. Open the battery compartment door located on the back of the unit.
2. Install 4 "AA" (R6) size batteries, making sure that the + and - polarities match the diagram printed inside the battery compartment.
3. Close the battery compartment door and tighten the battery door screw. Do not over-tighten.

### For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Only batteries of the same or equivalent type recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove the rechargeable batteries from the unit before charging (if removable).
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable batteries should only be recharged under adult supervision (if removable).


### Remove Demo Tab

The Barbie™ Guitar has a demo tab for in-store demonstration purposes. Make sure to remove this tab. To do so, gently pull on tab. Dispose of tab properly.

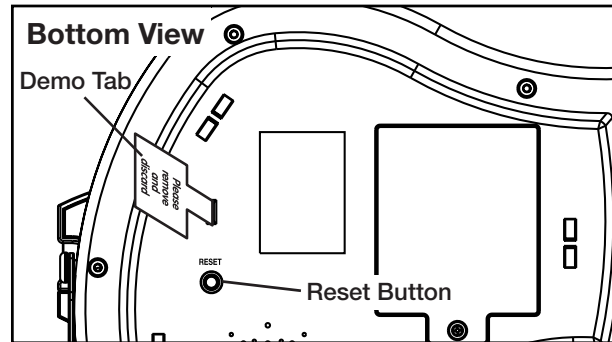


### Carrying Strap Installation

 
1. Attach the strap ends to the Guitar body.
2. Hang it onto your shoulder.
3. Adjust the strap length to fit you.

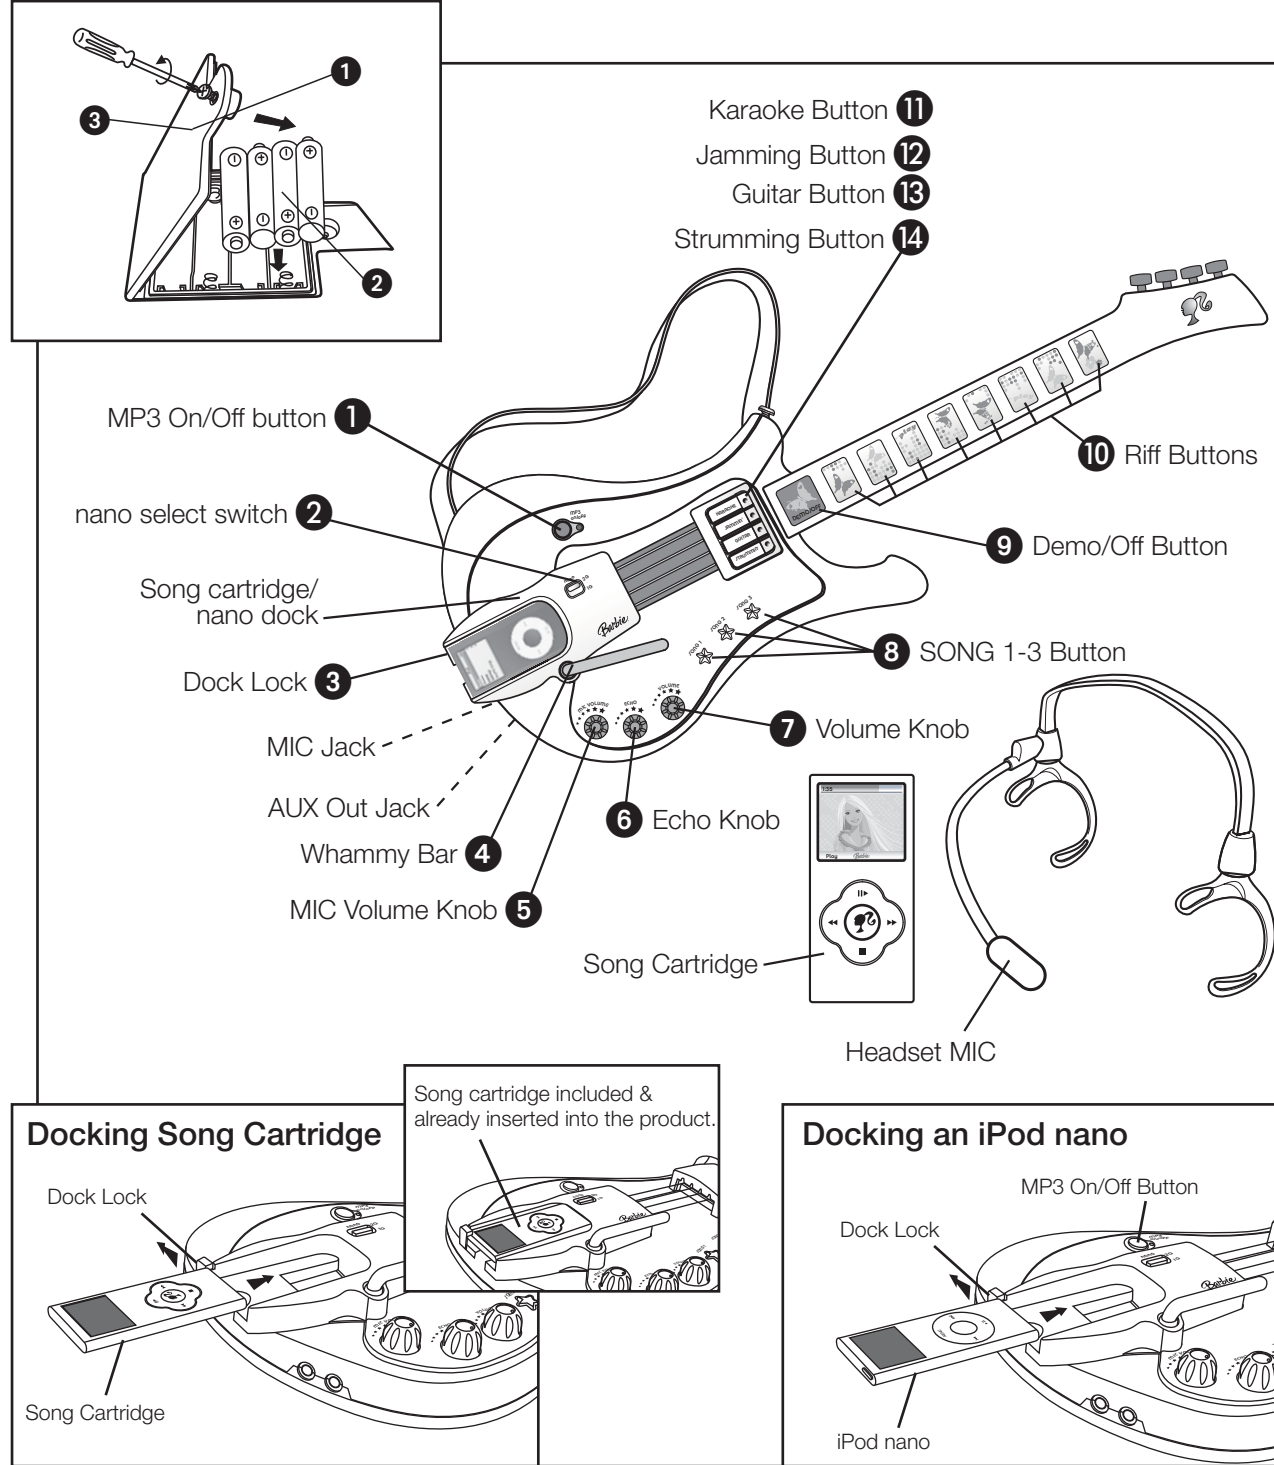

### Docking Song Cartridge

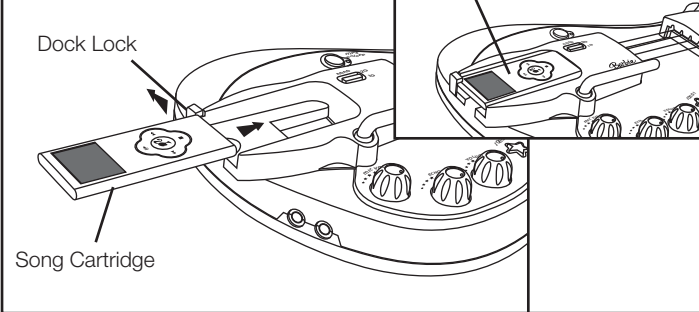 

### Docking an iPod nano

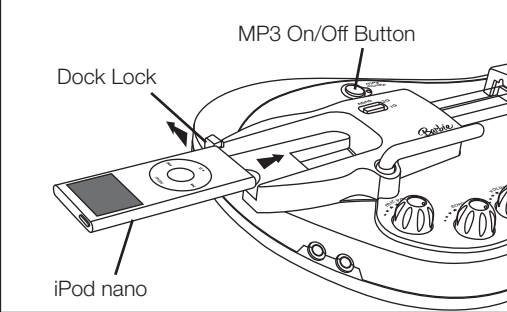 

## Docking Song Cartridges

**Note:** The Barbie™ Guitar comes with a song cartridge containing 3 songs already installed into the product.

1. Slide and hold the **3 Dock Lock** located on the front of the dock near the rear strap post to the open position, then slide a **song cartridge** into the dock as shown. Please make sure the cartridge is plugged in properly. Release the lock switch to the closed position.
2. Press a Song Button to listen to a song.

## Docking iPod nano

1. Turn on your iPod nano and select a song to play\*
2. Move the **2 nano select switch** on the guitar to match your nano model (1G or 2G). To avoid damage to the guitar or your nano, never dock a 1G nano when the switch is in 2G position, or vice versa.
3. Slide and hold the **3 Dock Lock** located on the front of the dock near the rear strap post to the open position, then slide your iPod nano into the dock as shown. Please make sure the nano is plugged in properly. Release the **3 Dock Lock** to the closed position.
4. Press play on your nano.
5. Press the **1 MP3 On/Off button** to play your nano through the guitar for 10 minutes (the guitar will auto shut off after 10 minutes). Press again to keep playing nano.
6. Please remember to stop play and to power off your nano manually.

\* **Note:** Follow your iPod nano user manual for details on operating your nano.

## Using the AUX Out Jack with other audio devices

You can connect your Barbie™ Guitar to a line-level input jack on a computer, recording device or home amplifier using the **AUX out jack**.

1. Connect the Barbie™ Guitar **AUX out jack** to a recording device or home amplifier using an audio cable (not included).
2. AUX output sound level is volume independent, so please adjust your recording device/home amplifier for suitable sound level.

## Playing with the Guitar

### Demo Mode

1. Press the **9 Demo/Off button** to learn about the guitar.

### Karaoke Mode

1. Press the **11 Karaoke button** to start karaoke mode, singing to a song cartridge.
2. Songs will start playing or you can press **8 SONG 1-3 buttons** to select a desired song.
3. Sing into the **headset MIC**. You can turn the **6 Echo Knob** to adjust the echo effect. Adjust **5 MIC volume**.
4. You can also play the guitar strings to get guitar sounds.
5. Press the **10 Riff Buttons** or **4 Whammy Bar** to get fun sound effects.